USER MANUAL

AF18

Stereo Wireless Sports Earphones

Please read this manual in its entirety
to ensure best fit and sound.

MEE audio™
MUSIC ENJOYMENT FOR EVERYONE

EN

PACKAGE CONTENTS

AF18 Stereo Wireless Sports Earphones

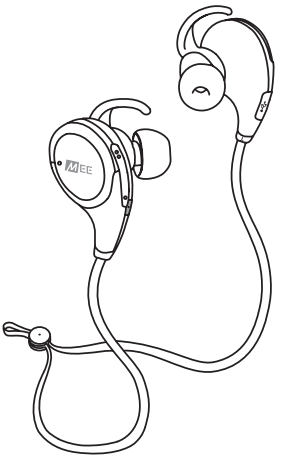

Micro-USB charging cable

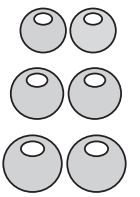

3 pairs of eartips

Cable cinch

1 pair of Earfins

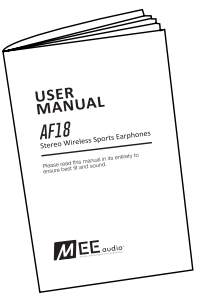

User manual

PRODUCT OVERVIEW

EN

AF18 Stereo Wireless Sports Earphones

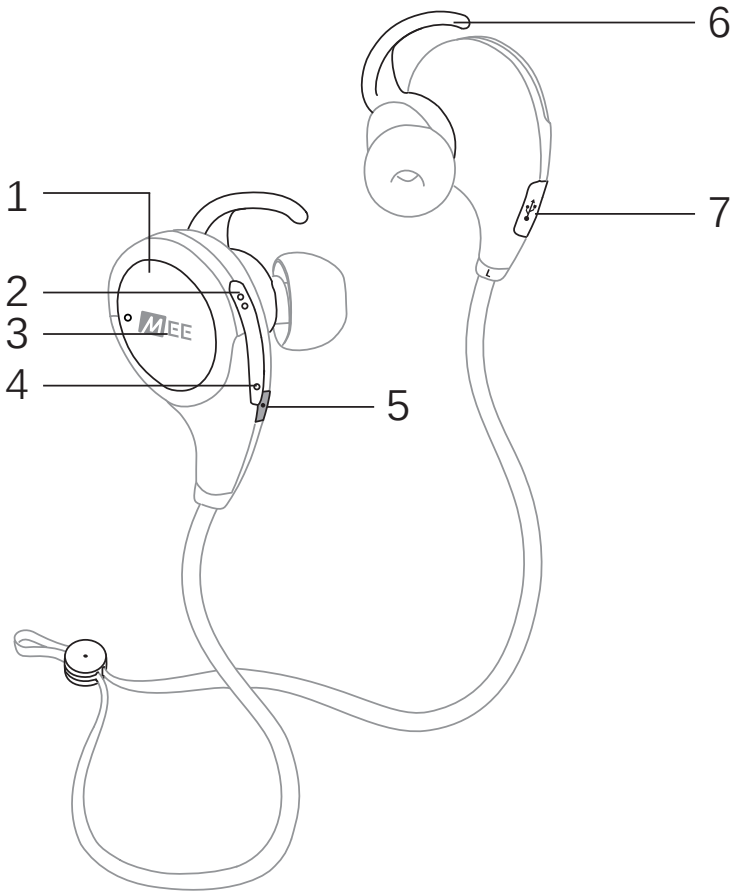

Right Earpiece

1 Multifunction button
2 Volume up / skip track button
3 LED status indicator light
4 Volume down / previous track button
5 Built-in microphone

Left Earpiece

6 Earfin
7 Micro-USB charging port

EN

CHARGING

Connect the charging cable to any powered USB port and to the charging port located on the left earpiece. The status indicator light will stay red while charging and turn blue when fully charged.

When the battery is low, the headset will say “battery low”. Apple devices such as the iPhone®, iPad®, and iPod touch® will also display an on-screen headset battery indicator when the AF18 is connected.

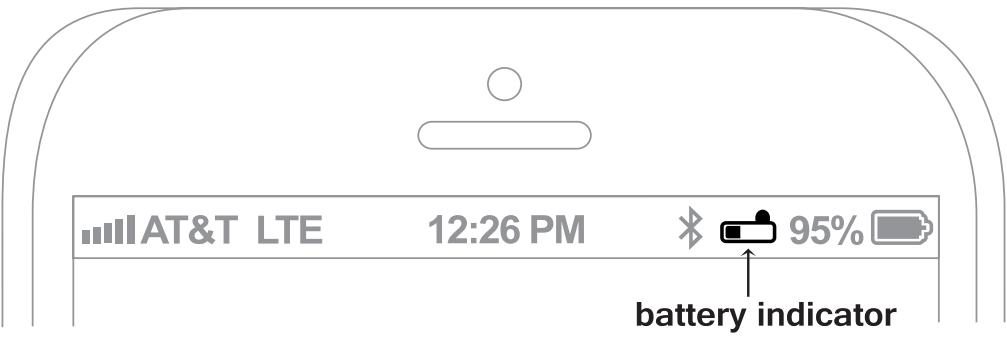

Note: the lifetime of the battery will be significantly reduced if your headset is not charged for a long period of time. It is recommended to charge your headset at least once a month.

WEARING THE EARPHONES

Wearing the earphones correctly will ensure the most comfortable and secure fit

Step 1: Select and install the correct eartips. The AF18 is an in-ear headphone and relies on a tight seal between eartip and ear canal to deliver great sound and bass. Three sizes of eartips are included to help you achieve the best fit. We recommend trying all of them and selecting the ones with the best sound and comfort for your ears.

Step 2: Identify the right and left earpieces and put the earphones in your ears. Adjust the earpieces for an airtight seal. Rotate earfins as needed for best stability in the ear.

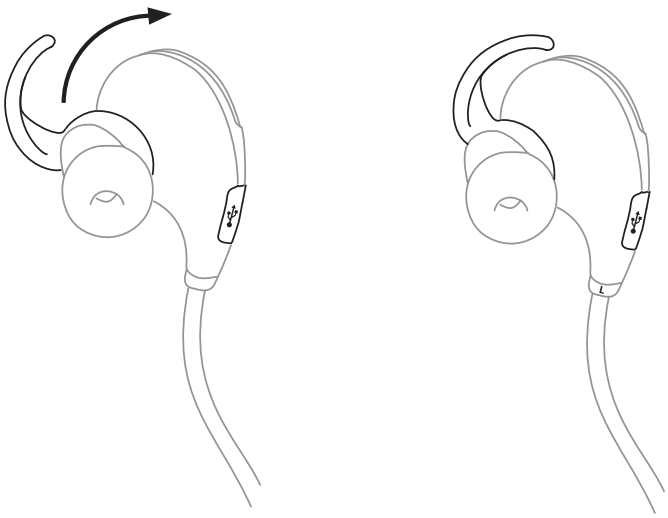

Step 3 (Optional): Adjust the cable cinch to reduce cable slack for a more secure and comfortable fit.

Move cinch to desired position

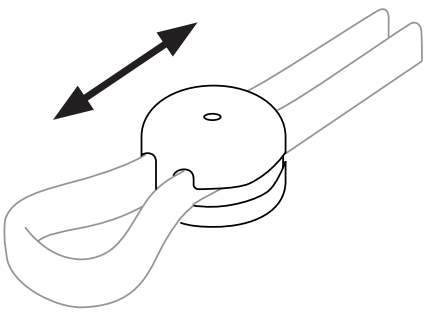

When worn correctly, the earphones will reduce outside noise and deliver a warm sound with good bass impact. If you do not get much bass or hear tinny sound with excessive treble presence, re-adjust the fit of the earphones in your ears and/or try a different size of eartips.

EN

BLUETOOTH PAIRING

Your headset must be paired to a Bluetooth device before it can be used. It is only necessary to pair your headset once with each device.

1. Make sure the AF18 is turned off and within 3 feet (1 meter) of your device. Put the headset in pairing mode by pressing and holding the **Multifunction** button for about 5 seconds until the status indicator begins to flash red and blue in an alternating pattern.

2. Open the Bluetooth menu on the device you wish to pair.

   iPhone, iPad, and iPod touch

   a) On your device, open the ***Settings*** menu

   b) Select ***Bluetooth.*** If Bluetooth is not on, turn it on. The iPhone/iPad/iPod® will automatically search for new devices

   Android™ Phones and Tablets

   a) On your device, open the ***Settings*** menu

   b) Select ***Bluetooth*** (on older Android devices ***Bluetooth*** is found in the ***Wireless & Networks*** menu). If Bluetooth is not on, turn it on. Select “Search for Devices” or “Refresh” if your phone or tablet does not automatically search for new devices.

   Windows® Phone 8 devices

   a) On your device, open the ***Settings*** menu

   b) Select ***Bluetooth***. If Bluetooth is not on, turn it on. Windows Phone 8 will automatically search for new devices

   Computers, Laptops, and Other Devices

   Visit the Bluetooth Support Page at **www.MEEaudio.com** for pairing and setup information.

3. Wait until you see “AF18” on the screen of your device.

4. Select “AF18” on your device and follow any further prompts to pair. Use “0000” if a pin is required. Once connected, the blue indicator light will flash once every 8 seconds.

If pairing fails after several tries, please refer to your device’s user manual.

Visit the Bluetooth Support Page at **www.MEEaudio.com** for instructional pairing videos and troubleshooting information.

CONNECTING TO PAIRED DEVICES

The AF18 can remember previously paired devices. Any time it is turned on, it will automatically connect with the last paired Bluetooth device that is on and within range. If the headset does not connect automatically once turned on, open the Bluetooth menu on your device and select “AF18” from the Bluetooth device list.

MULTIPOINT

Multipoint allows two Bluetooth devices to be connected to the AF18 simultaneously. Both devices will need to be paired before Multipoint can be used.

To use two Bluetooth devices with the AF18, first pair them by following the procedure described in the **Bluetooth pairing** section for each device and then turn off the headset.

When turned on again, the headset will automatically attempt to connect to the 2 most recently paired devices, as long as they have Bluetooth enabled and are within range. If a device that has already been paired does not connect automatically, select “AF18” from the Bluetooth menu of the device.

To switch between the two devices, pause audio playback on the active device and start audio playback on the other connected device. It takes several seconds for the audio to switch.

Incoming calls will always take precedence over media. When a call comes in, the AF18 will automatically activate the device with the incoming call.

FUNCTIONALITY & CONTROLS

Headset Status	Function	Operation
Powered off	Power on	Press and hold the **Multifunction** button for 1 second
Powered on	Power off	Press and hold the **Multifunction** button for 3 seconds
	Raise or lower volume	Press the **Volume up** or **Volume down** button
Incoming phone call	Answer phone call	Press the **Multifunction** button
Phone call in progress	End phone call	
	Mute the call	Double press the **Multifunction** button
Incoming phone call	Reject phone call	
Media playing	Play/pause media*	Press the **Multifunction** button
	Next track**	Press and hold the **Volume up** button for 1 second
	Previous track**	Press and hold the **Volume down** button for 1 second
No phone calls in progress	Redial**	Double press the **Multifunction** button
	Activate Siri/voice command**	Press and hold the **Multifunction** button for 2 seconds

* You may need to bring your media player up on the screen for initial playback to start

** Not all devices/applications support this functionality.

FACTORY RESET

A factory reset will clear all paired devices and restore all settings to factory default. To perform a factory reset, insert charging cable, then press and hold the **Multifunction** button for 3-5 seconds. The status indicator light will flash purple three times to confirm that the system was successfully reset.

VOICE PROMPTS

To disable voice prompts, enter pairing mode, then press and hold the **Volume down** button for 4 seconds.
To re-enable voice prompts, enter pairing mode, then press and hold the **Volume up** button for 4 seconds.

SAFETY AND CARE

- To clean, remove the eartips and rinse them under running water. Clean the earphones using a cotton swab damp with a small amount of rubbing alcohol. Allow the earphones and eartips to dry completely before resuming use
- Use only the supplied Micro-USB charging cable or a compatible replacement from a reputable manufacturer
- Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F, including direct sunlight
- There are no user replaceable/reparable parts in the headset. Disassembling it will void your warranty
- If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty
- Do not use around flammable gasses as fire may occur
- Keep the device and packaging out of reach of children

WARNING

Using headphones at high volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Turn the volume all the way down after connecting your earphones, then gradually increase the volume until you reach a comfortable listening level. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

TROUBLESHOOTING

Visit the Bluetooth Support Page at **www.MEEaudio.com** for troubleshooting procedures

SPECIFICATIONS

Visit the AF18 product page at **www.MEEaudio.com** for product specifications

WARRANTY:

The AF18 is covered by a 1-year manufacturer warranty.

For more information, visit **www.MEEaudio.com**

Have a question?
Email **support@meelec.com**

MEE audio and its logo are registered trademarks of S2E, Inc.
All rights reserved.

iPhone®, iPad®, iPod®, iPod touch®, and Siri® are registered trademarks of Apple Inc.
Android™ is a registered trademark of Google Inc.
Windows® Phone is a registered trademark of Microsoft Corporation in the United States and other countries.

www.MEEaudio.com
support@meelec.com